



尼雅孚反光检测灯使用方法

How to Use the NYF handheld Retroreflective Verifier

尼雅孚反光检测灯使用方法



- 一. 握住反光灯，使其靠近眼睛，以便能从小孔中看过去；
- 二. 用拇指轻推开关，打开反光灯电源；
- 三. 将被检测物体放置在离灯15cm处；
- 四. 从孔中看过去即看到被检测物体的反光度。

How to Use the NYF handheld Retroreflective Verifier

1. Hold the verifier close to your eye, so that you can see through the smaller opening.
2. Turn on verifier by simply pressing the switch with your thumb.
3. Hold item to be verified approximately 6 inch (15cm) away from the verifier.
4. When seen through the verifier, a distinctive pattern should appera in the retroreflective product.



Bulb/battery replacement

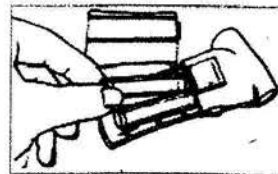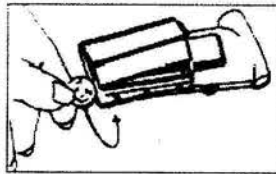

To open NYF Handheld Retroreflective Verifier, insert a coin into slot at the bottom and turn the coin to pop open the cover.
Battery: 2 x 1.5V size AA

Distributed By:



HCL Asia Ltd.

Unit 14, 6/F., Worldwide Industrial Centre,
43-47 Shan Mei Street, Fotan, Shatin, Hong Kong
T: +852 27420018 F: +852 27420053

info@hcl-asia.com.hk

www.hcl-asia.com.hk